



Feature Matrix

TRIMBLE BUSINESS CENTER v5.10 SOFTWARE

May 2019

Each Trimble® Business Center (TBC) Edition is designed to support a set of related workflows:

- ▶ **Viewer (Unlicensed):** Import + review field data, view projects, + export to Trimble field devices + software.
- ▶ **Field Data Edition:** Export third-party field data, perform basic CAD functions, complete data quality control, adjust networks, + work with level data.
- ▶ **Surface Modeling Edition:** Basic point cloud management; create + edit surfaces + alignments, cut/fill maps, + earthwork reports.
- ▶ **Survey Intermediate Edition:** Perform GNSS post-processing, traverse adjustments, site calibrations; work with background images, labels, + dimensions.
- ▶ **Survey Advanced Edition:** Work with Trimble Vision™ data, create plan sets, process cadastral data, leverage full COGO + corridor routines.
- ▶ **Site Modeling Edition:** Convert + elevate 2D geometry into 3D for field operations; cleanup project data.
- ▶ **Site Construction Edition:** Compute site mass haul + site takeoff computations, linear quantities, layer depths, + material volumes.
- ▶ **Infrastructure Construction Edition:** Parametric intersection, interchange, + ramp designs with corridor mass haul quantities + volumes.



Blue text denotes new or enhanced v5.10 features

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
Coordinate System Management	x	x	x	x	x	x	x	x
Data Viewing	x	x	x	x	x	x	x	x
Feature Definition Management	x	x	x	x	x	x	x	x
Feature Library Creation + Editing	x	x	x	x	x	x	x	x
GNSS Online Planning	x	x	x	x	x	x	x	x
SketchUp Compatibility	x	x	x	x	x	x	x	x
Trimble Field Data Import + Export	x	x	x	x	x	x	x	x
Trimble Sync Manager	x	x	x	x	x	x	x	x
VisionLink	x	x	x	x	x	x	x	x
Basic CAD + COGO Tools		x	x	x	x	x	x	x
Data Spreadsheets		x	x	x	x	x	x	x
Detect Crossing Geometry		x	x	x	x	x	x	x
Feature Code Processing		x	x	x	x	x	x	x
Georeference + Export IFC for Trimble Access		x	x	x	x	x	x	x
Import + Adjust Level Data		x	x	x	x	x	x	x
Import + Export ESRI Shapefiles		x	x	x	x	x	x	x
Local Site Settings		x	x	x	x	x	x	x
Optical Data Processings		x	x	x	x	x	x	x
Third-Party Data Exports		x	x	x	x	x	x	x
TopoDOT Export - Terrestrial Scan Data		x	x	x	x	x	x	x
Create + Edit Alignments			x	x	x	x	x	x
Create + Edit Surfaces			x	x	x	x	x	x
Create Points from CAD			x	x	x	x	x	x
Earthwork Reports			x	x	x	x	x	x
Point Cloud Viewing + Sampling			x	x	x	x	x	x
Surface + Stored Cross-Section Reports			x	x	x	x	x	x
Surface Contours			x	x	x	x	x	x
View Data in Google Earth			x	x	x	x	x	x



Blue text denotes new or enhanced v5.10 features

Command	Viewer	Field Data	Surface Modeling	Survey Intermediate	Survey Advanced	Site Modeling	Site Construction	Infrastructure Construction
ALTA Relative Precision Report				X	X	X	X	X
Customized Reports				X	X	X	X	X
Dimensions + Annotations				X	X	X	X	X
Display Background Maps				X	X	X	X	X
Dynamic Label + Table Creation				X	X	X	X	X
Georeference PDFs				X	X	X	X	X
GNSS Baseline Processing				X	X	X	X	X
Grid + Ground Labeling				X	X	X	X	X
Image Tools				X	X	X	X	X
Network Adjustments				X	X	X	X	X
Site Calibration Tools				X	X	X	X	X
Traverse Adjustments				X	X	X	X	X
Trimble RTX GNSS PP Service				X	X	X	X	X
Automated Cross-Section Plots					X	X	X	X
Corridor Design Tools					X	X	X	X
Create 3D PDFs					X	X	X	X
Create COGO + Survey CAD Commands					X	X	X	X
Create Plan + Sheet Sets					X	X	X	X
Create Rectified Images					X	X	X	X
Create Side Slope					X	X	X	X
Create Subplanes Along a Path					X	X	X	X
Cutting Plane View + Plane Manager					X	X	X	X
Dynamic Scale Bars					X	X	X	X
Dynaview Links to Model Space					X	X	X	X
Generate Panorama Images					X	X	X	X
History Log View					X	X	X	X
Import + View Mobile Mapping Data					X	X	X	X
Legal Description Writer					X	X	X	X
Macros Creation + Application					X	X	X	X
Merge Survey Projects					X	X	X	X
Parcel + Map Check Routines					X	X	X	X
Projected, Radial, + Vertical Surfaces					X	X	X	X
Publish to Trimble Clarity v1					X	X	X	X
Single + Double Proportioning					X	X	X	X
Superelevation Diagrams					X	X	X	X
TopoDOT Export - Mobile Mapping Data					X	X	X	X
Trimble VISION Support					X	X	X	X
Virtual DR					X	X	X	X
Data Prep Tools						X	X	X
Elevate Contours, Pads, + Lines						X	X	X
Machine Data Tools						X	X	X
Map Layers						X	X	X
Project Cleanup Tools						X	X	X
Surface Site Improvements						X	X	X
Variable Offset Lines						X	X	X
Create + Analyze Site Mass Haul							X	X
Create Site Borings							X	X
Create Corridor Borings							X	X
Custom Takeoff Reports							X	X
Digitize Contours, Lines, + Pads							X	X
Digitize Cross-sections							X	X
Identify Site Regions							X	X
Station / Offset View							X	X
Strata + Topsoil Area Tools							X	X
Validate Site Improvements							X	X
Corridor Mass Haul Import + Export								X
Create + Analyze Corridor Mass Haul								X
Export Mass Haul to TILOS								X
Parametric Corridor Design Tools								X
Save Intersection Templates								X

Each Trimble® Business Center (TBC) Module is designed to support a group of workflows around a single topic. The modules are add-ons to an edition.

- ▶ **Aerial Photogrammetry Module:** Process + create deliverables with Trimble + third-party UAS data in TBC + UASMaster.
- ▶ **Drilling Piling Dynamic Compaction Module:** Create drill plans + reports for Trimble DPS900™ Machine Control Systems.
- ▶ **GIS Module:** Seamlessly integrate GIS data from Trimble Access™ + TerraSync™ software into TBC + connect to external GIS databases.
- ▶ **Mobile Mapping Module:** Process + register MX9 Mobile Mapping data; work with MX hardware calibrations.
- ▶ **MM MX9 Laser Correction Module:** Account + adjust for multiple-time around (MTA) laser effects in the MX9 Mobile Mapping hardware.
- ▶ **Scanning Module:** Register + colorize SX10™ data + classify regions, extract features, + create deliverables from SX10™ + third-party point clouds.
- ▶ **Tunneling Module:** Create + edit tunnel models for Trimble Access™ Tunnels + create customized as-built + geometry reports.
- ▶ **Utility Modeling Module:** Generate + visualize gravity, pressurized, + other utility runs in parametrical constrained trenches.



Blue text denotes new or enhanced v5.10 features

Command	Aerial Photogrammetry	Drilling Piling Dynamic Compaction	GIS	Mobile Mapping	MM MX9 Laser Correction	Scanning	Tunneling	Utility Modeling
Adjust Photo Stations	x							
Adjustment with Ground Control Points	x							
Advanced UAS Adjustment	x							
Create Orthomosaic, Point Cloud, + DSMs	x							
Delair UX11 Support	x							
Hardware Agnostic Support in UASMaster	x							
senseFly eBee SODA Support	x							
UASMaster v9.x	x							
Create Compaction Plans + Reports		x						
Create Drill Plans + Reports		x						
Create Pile Plans + Reports with Custom Piles		x						
Import + Export to DPS900		x						
Extract Schema into Feature Libraries			x					
Import + Export File Geodatabases			x					
Import COR Files			x					
Map Metadata			x					
Post-process SSF Data			x					
Read GIS Data from Data Sources			x					
Upload Features to GIS Data Sources			x					
Adjust MX9 Mobile Mapping Data				x				
Compute Mobile Mapping Point Clouds				x				
Export Hardware Calibrations				x				
Import Processed GNSS Trajectories				x				
Register + Report MX9 Scan Data				x				
Adjust MTA for MX9 Laser					x			
Automatic Ground Extraction						x		
Automatic Region Classification						x		
Create CAD Points from Scan Points						x		
Create Orthophoto Images						x		
Extract Point Features						x		
Georeference Scan Data						x		
Import FARO Scan Data						x		
Import TZF (Trimble TX6 + TX8) Data						x		
Intensity-based Point Cloud Filtering						x		
Pairwise Point Cloud Registration						x		
Plane-based Point Cloud Registration						x		
Assign Point Cloud to Tunnel As-Built							x	
Create + Edit Tunnel Corridors							x	
Create Setout Points							x	
Custom As-Built Tunnel Reports							x	
Draft Plan Sets with Tunnel Geometry							x	
Import + Export to Trimble Access Tunnels							x	
Render Design + As-Built Tunnel Mesh							x	
Tunnel Geometry Reports							x	
Create Pipe + Utility Networks								x
Create Utility Nodes								x
Customize Utility Shapes								x
Define Trench Templates + Surfaces								x
Trenche Template Manager								x
Utility Takeoff Reports								x